Quick Setup Guide

SERIES 4+ 440 450

Congratulations on the purchase of your new Samsung TV.
Read this setup guide to get your TV up and running quickly.

STOP

Please do not return this unit.
If you have problems operating your TV, call:
1-800-SAMSUNG (1-800-726-7864)
For web support please visit:
www.samsung.com/support

1-800-SAMSUNG (1-800-726-7864)
Samsung Electronics America, Inc.
85 Challenger Road Ridgefield Park, NJ 07660-2112
Samsung Electronics Canada Inc.
55 Standish Court Mississauga, Ontario L5R 4B2
Call Center hours of operation: Mon-Sun, 9:00 AM -12 AM EST.
To register this product, visit: www.samsung.com/register.

Step 1: Install the Stand

Follow the steps below to connect the TV to the stand.

✎ **NOTE**

- Make sure to distinguish between the front and back of the Stand and Guide Stand when assembling them.
- Make sure that at least two people lift and move the PDP TV.

1 With your TV upright, connect the TV to the Stand.

2 Fasten four screws (M4 X L8) at position.

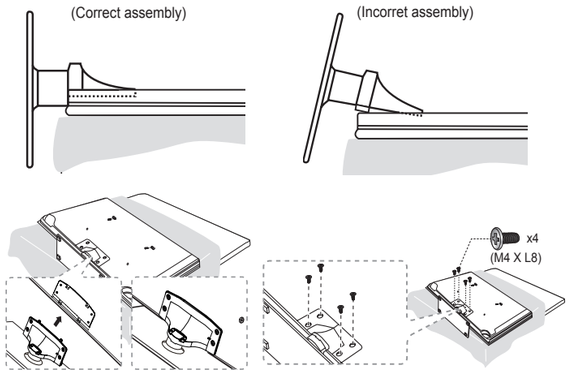

Step 2: Install the Batteries into the Remote

To install batteries into your remote control, follow these steps:

1. Lift the cover on the back of the remote upward as shown in the figure to the right.
2. Install two AAA batteries.
   ✎ Make sure to match the + and - ends of the batteries to the diagram in the battery compartment.
3. Replace the cover.

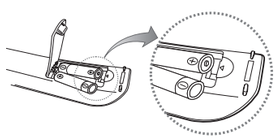

Step 3: Connect Power and Antenna or Cable

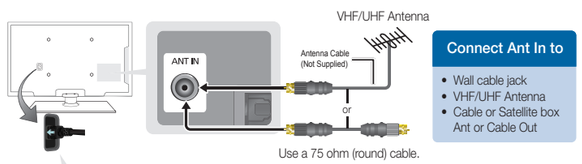

Connect Ant In to

- Wall cable jack
- VHF/UHF Antenna
- Cable or Satellite box Ant or Cable Out

Make sure the AC power cord is plugged in securely to the wall outlet and the TV.

Step 4: Connect External Devices

Connecting an AV device (DVD/Blu-ray player, cable/satellite box, etc.)

Use one of the connections below to connect your TV to an external A/V device. We recommend using HDMI for the highest picture quality.

✎ When connecting to **AV IN** on the back of your TV, attach the video cable (yellow) to the green jack next to the **AV IN** label. The jack will not match the color of the video cable (yellow).

Best Connection

HD connection (up to 720p/1080i)

Using an HDMI Cable

DVD, Blu-ray player, HD cable box, HD STB (Set-Top-Box) satellite receiver

Very Good Connection

HD connection (up to 720p/1080i)

Using an HDMI to DVI Cable

Good Connection

Component connection (up to 720p/1080i)

Using a Component Cable

DVD, Blu-ray player, cable box, STB satellite receiver, VCR,

Lowest Quality Connection

Audio/Video connection (480i only)

Using an Audio/Video Cable

DVD, Blu-ray player, cable box, STB satellite receiver, VCR

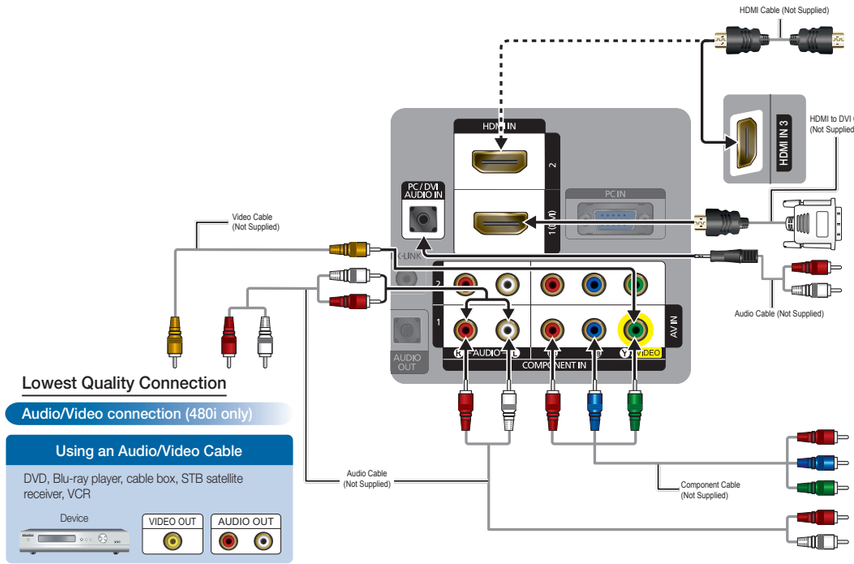

Connecting an audio device (Home Theater, etc.)

Connect your TV to your Home Theater or other audio device to enjoy enhanced Sound quality.

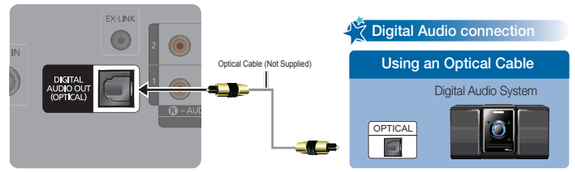

Connecting a PC

Connect your TV to a PC to use it as a Monitor.

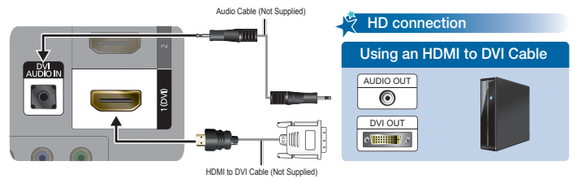

Step 5: Run Plug & Play

When you turn on your TV for the first time, it automatically launches the Plug & Play function. With Plug & Play, you can select the On Screen Display language, set the clock mode, and launch the TV's channel memorizing process.

It also displays connection instructions similar to those in this guide.

To navigate while Plug & Play is running, press the Up, Down, Left or Right arrow buttons on your remote. To make a selection, press the ENTER button.

To skip a screen, press the **MENU** button. To turn on your TV, press the **POWER** button on the remote or on the TV. To run Plug & Play, follow these steps:

1 Using your remote control, select the language for the On Screen Display (OSD), and then press the ENTER button.

2 Select **Home Use**, and then press the ENTER button. If you select **Store Demo**, the TV will reset your picture and audio settings every 30 minutes.

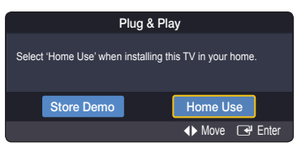

3 Select the **Antenna source** to memorize, you must select **Antenna Source** to same type as your cable system type. After selecting source, select **Start**; then press the ENTER button on your remote.

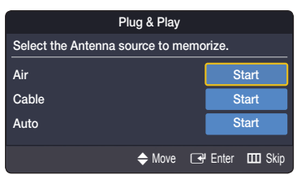

✎ Most cable systems are Standard(STD) systems, If you are not sure about what kind of cable system you have, contact your cable company.

✎ If your TV is attached to a cable or satellite box, skip Steps 3 through 5. After Plug & Play is complete, set your TV to Channel 3 or 4, according to the directions for your cable or satellite box.

4 The TV memorizes the available channels. This process can take up to 45 minutes.

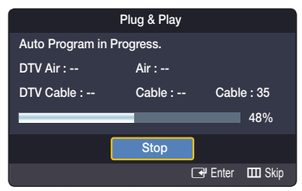

5 After the TV has memorized the channels, choose the **Clock Mode**. Select **Auto** if you have a digital channel in your area. Select **Manual** if you don't, or if you have a cable or satellite box. When done, press the ENTER button.

✎ If you select **Manual**, the clock setting screen appears.

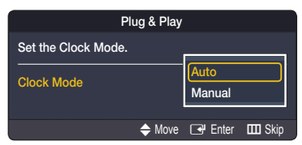

6 Select the daylight savings time setting: **Off**, **On** or **Auto** and then press the ENTER button.

✎ This function is only available when the **Clock Mode** is set to **Auto**.

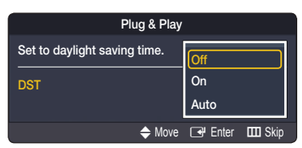

7 Select the time zone in which you live, and then press the ENTER button.

8 After the time zone screen, The connection method for best HD screen quality is displayed. Press Right arrow button on your remote to view each screen in succession. Press the Blue button to skip this section.

9 The **Enjoy your TV.** screen appears. Then press the ENTER button.

If You Want to Rerun Plug & Play

1. Press the **SOURCE** button on your remote, then select **TV** mode.
2. Press the **MENU** button on your remote to display the menu.
3. Press the ▲ or ▼ button to select **Setup**, and then press the ENTER button.
4. Press the ENTER again to select **Plug & Play**.

BN68-03326A-00

Step 6: Remote Control

Remote Control Buttons and Functions

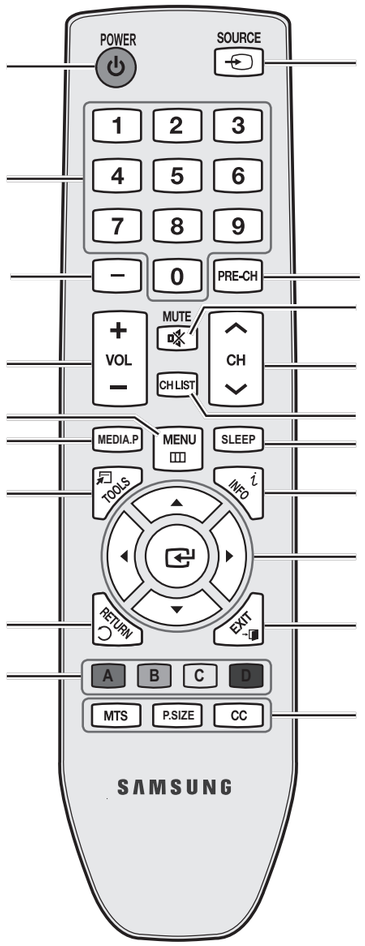

Turns the TV on and off.

Displays and selects the available video sources.

Press to directly access channels.

Press to select additional channels (digital) being broadcasted by the same station. For example, to select channel “54-3”, press “54”, then press “-” and “3”.

Returns to the previous channel.

Cuts off the sound temporarily.

Adjusts the volume.

Changes channels.

Brings up the OSD.
Displays **Media Play (USB)**.

Displays the channel list on the screen.

Displays Favorite Channel Lists on the screen.

Quickly select frequently used functions.

Displays information on the TV screen.

Selects the on-screen menu items and changes the values seen on the menu.

Returns to the previous menu.

Exits the menu.

Buttons used in the **Channel list, Media Play (USB)** menu, etc.

MTS: Press to choose stereo, mono or Separate Audio Program (SAP broadcast).
P.SIZE: Selects the picture size.
CC: Controls the caption decoder.

Changing Channels and Adjusting the Volume

Adjust the volume by pressing the Volume button on the remote.



Change the channels by pressing the Channel button on the remote.

✎ If your TV is attached to a cable or satellite box, change the channel using the box’s remote.

✎ You can also change the channels by pressing the ∨ **CH** ∧ button on the front panel of your TV and adjust the volume by pressing the **–VOL+** button.

Selecting a Source



To watch a movie on your Blu-ray player or watch your favorite TV show, you must select the correct source. A source is a device, such as a Blu-ray/DVD player, a cable/satellite box, antenna or a cable TV input. Sources can be connected to your TV through the HDMI, DVI, Component, Composite, or D-sub connections, or through the Antenna or Cable In connections.

To view the signal from a source connected to the HDMI, DVI, Component, Composite, or D-sub jack, press the SOURCE button on your remote. Each time you press the SOURCE button, you change to a different source.

Viewing the On Screen Menus

To view the On Screen Menus, follow these steps:

1. With the power on, press the MENU button on your remote. The main menu appears.
   The menu’s left side has the following menu options: **Picture, Sound, Channel, Setup, Input, Application** and **Support.**
2. Press the ▲ or ▼ button on your remote to select a menu option, and then press the ENTER ↵ button.
3. When done using the menu, press the EXIT button on your remote to exit.

Changing the Screen Size

Your TV has several screen size options, each designed to work best with specific types of video input. If you have a cable box or satellite receiver, it may have its own set of screen sizes as well.

To change the screen size, press the P.SIZE button on your remote. The first time you press it, your TV displays the current setting. Thereafter, each time you press the P.SIZE button, you change the size of the picture on the screen.

The following sizes are available:

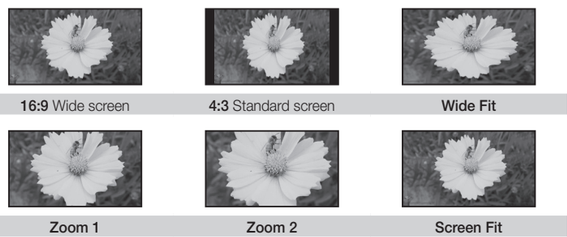

✎ **Screen Fit:** Displays the full image without any cut-off when HDMI (720p / 1080i / 1080p) or Component (1080i / 1080p) signals are inputted.

Changing the Picture Mode

Your TV has three preset **Picture** Modes with factory adjusted settings, each designed to give you an excellent picture under specific conditions.

To change the **Picture** mode, press the P.MODE button on your remote. The first time you press it, your TV displays the current setting. Thereafter, each time you press the P.MODE button, you change the mode of the picture on the screen.

The **Picture** Modes are listed and described in the table below:

Mode	Description
Dynamic	Brightens picture. For a vibrant, enhanced image in brightly lit or sunny room.
Standard	For a bright, detailed picture in a normally lit room.
Movie	For a studio quality cinema picture in a dimly lit or dark room.

To change the **Picture Mode**, follow these steps:

1. With the TV on, Press the MENU button on your remote, then select **Picture**.
2. Select **Mode**, then Press the ENTER ↵ button.
3. On the **Mode** menu in **Picture**, use the ▼ or ▲ on your remote to select the picture mode you want.
4. Press the ENTER ↵ button to finish the change.

Setting the Clock

Before you can use your TV’s On/Off Timer, you must set the clock. To set the clock, follow these steps:

1. Turn on your TV, press the MENU button on your remote, then select **Setup** → **Time**.
2. Select **Clock Mode**, and then press the ENTER ↵ button.
3. Choose **Auto** or **Manual**.
   - If you select **Auto**, the current time will be set automatically using the time from a digital channel.
   - If you select **Manual**, you can set the **Month, Day, Year, Hour, Minute** and **am/pm** directly by pressing up, down, left and right arrow button on your remote.
4. Press the RETURN button on your remote when done.

Connecting a USB Device for Media Play

You can enjoy photo and music files stored on a USB device by connecting it to the TV and using the **Media Play** feature. To connect a USB device for **Media Play**, follow these steps:

1. Turn on your TV.
2. Connect a USB device containing photo and/or music files to the USB jack on the side of the TV.
3. When the **Input** selection screen is displayed, press the ▶ button to select **Media Play (USB)**, then press the ENTER ↵ button.